

Universal Truck Tester

Tank Truck Overfill Prevention System Diagnostics

ELECTRONIC
PRODUCT
LINE



Featuring Dynacheck® – Automatic and Continuous Self-Checking Circuitry

DESCRIPTION

The Scully Universal Truck Tester is the most advanced and comprehensive road tanker tester available. It checks the operation of road tanker overfill prevention, and self-proving earthing systems. Complete diagnostics limit the expense of downtime. The tester is compatible with Scully IntelliCheck® Load Anywhere®, and independent Scully optic and thermistor road tanker sensors.

Once the tester is set up in a non-hazardous area, move the selector switch to the desired setting and connect the tester to the tank truck socket with the appropriate plug and cable. The test results will be shown clearly on the easy to read LED display.



TECHNICAL SPECIFICATIONS

Power Supply:	8 “D” Cell Batteries
Battery Access:	Remove 2 Screws in Front Panel
Operating Temp Range:	-13°F to +113°F
Maximum number of compartments:	8
Dimensions:	8" x 6" x 4"
Weight:	3.8 lbs
Approvals:	None

ORDERING INFORMATION

Description Truck	Part Number
Scully Universal Tester (Order appropriate plug and cable with tester. “D” size batteries not included)	08938
PCAM, 10-Pole Scully Plug and Cable	08926
PCAM, 6-Pole WOGA Plug and Cable	08927
PCAM, 7-Pole J560 Optic	08928
PCAM, 4-Pole Plug and Cable	08936

Copyright © 2014 Scully Signal Company. Dynacheck, Dynamic Self-Checking, Dynamic Self-Test, Faylsafe, IntelliCheck, Intelliview, Load Anywhere, Maxsafety, are registered trademarks of Scully Signal Company. All Rights Reserved. Specifications are subject to change without notice.



Dynamic Self-Testing® Overfill Prevention Systems



Zacatepetl 363 A, Delegación Tlalpan 14010
México, D.F. Tel- +52 (55) 5606-1611,
e-mail: promtec@promtec.com.mx